MODEL: 60057

PACKING DIAGRAM

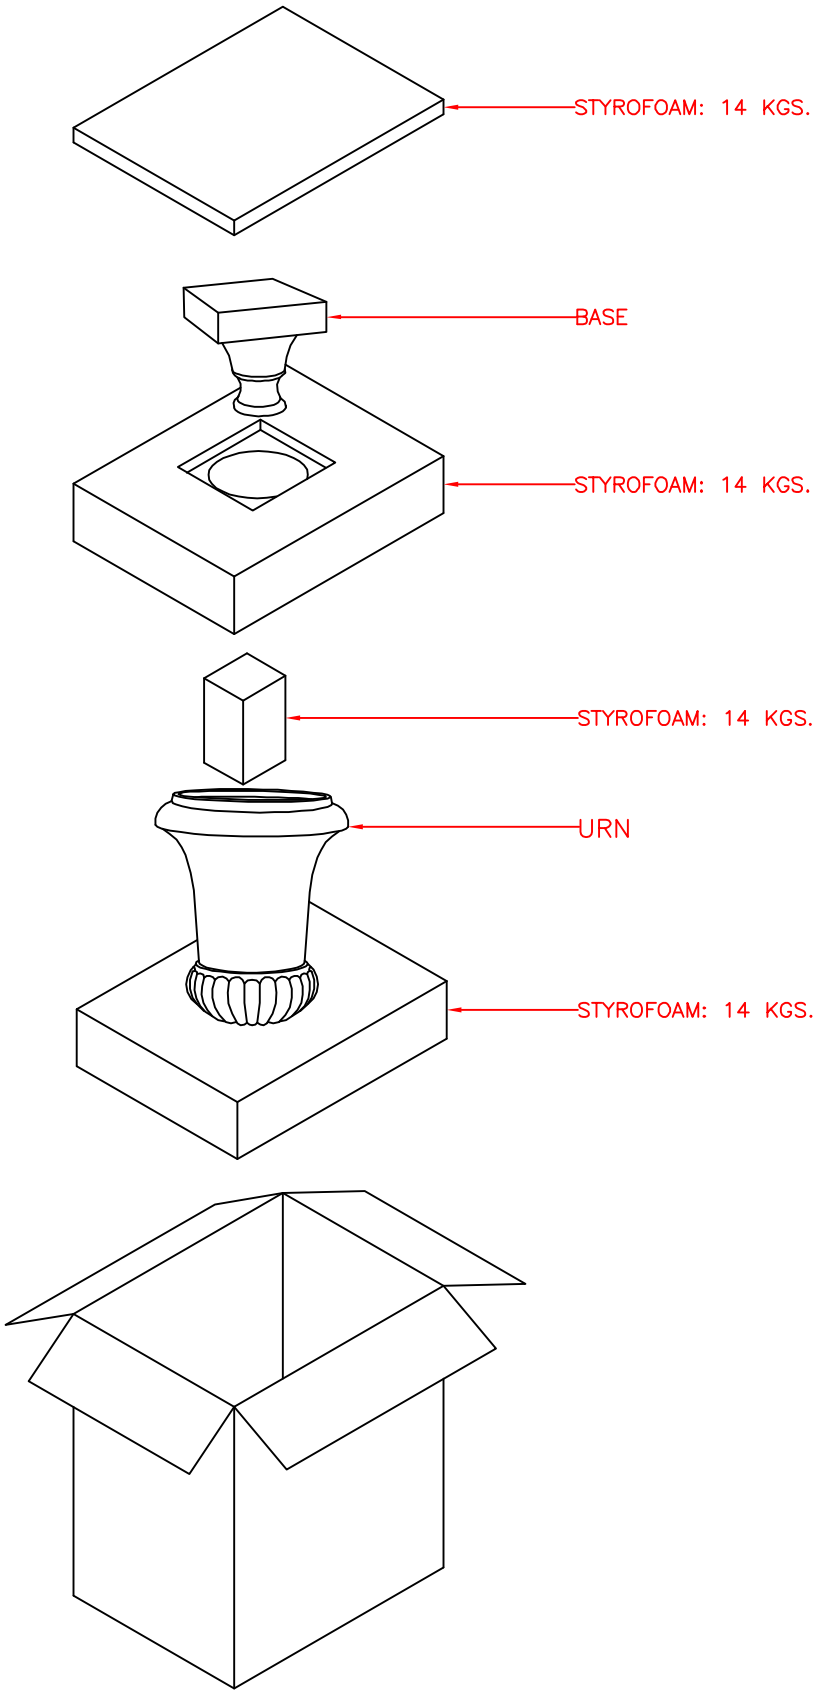

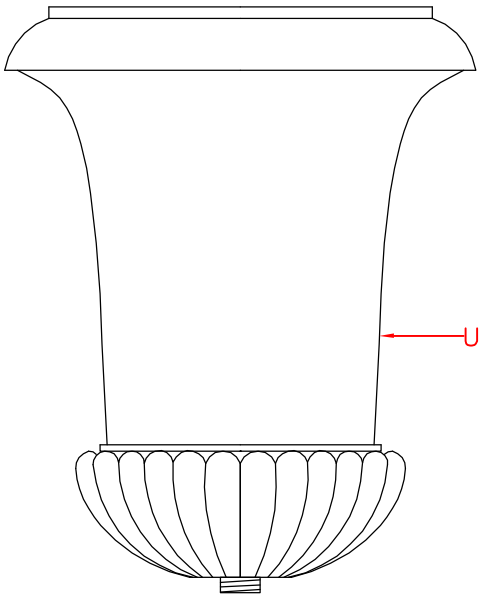

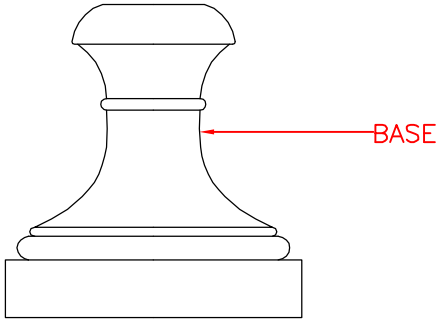

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE ORNAMENT

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: URN AND BASE. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

ASSEMBLE THE ORNAMENT

1. DRILL (3) HOLES AT (3) MARKERS IN URN TO ALLOW DRAINAGE IF DESIRED.

2. PLACE BASE ON A FLAT SURFACE.

3. PLACE URN ONTO TOP OF THE BASE AND ROTATE CLOCKWISE TO SECURE.